Novak M d.o.o.
Medical equipment

Brezovce 7
1236 Trzin
Slovenia
www.novak-m.si
e-mail: info@novak-m.si

T: +386 1 5620117
F: +386 1 5620118

TECHNICAL DESCRIPTION, USER MANUAL AND MAINTENANCE

THERAPY TABLE S
THERAPY TABLE S3
THERAPY TABLE S4

Thank you for your trust.
You have chosen a good product!

CONTENT

1. Safety and maintenance	2
2. Short overview	3, 4
3. Technical description	5
4. User manual	6
5. Optional accessories	7
6. Declaration of conformity	8
7. Guarantee certificate	8

1. SAFETY AND MAINTENANCE

Electric safety

- Connect the table to the power supply so that its power cable goes directly from its actuator to the power socket!
- Power cables have to lie under the table base not to get stuck during moving any of the table parts!
- Do not open any electric parts!
- Leave all technical interventions to authorized staff not to damage the product!

Safe use

- Do not place hands or feet between the moving parts of the table!
- Make sure that no object touches the circular switch before or during the use of the table!
- Do not step on circular switch (KS)!
- Do not push the castoring system lever while patient is on the table!
- Do not leave children unattended near the table as serious injuries can occur!
- Upholstery and metal parts are to be cleaned by a mixture of detergent and water and wiped dry. Use non-abrasive cleaners!
- Lubrication of moving parts is unnecessary!
- Product lifetime is 5 years.

Package handling

- Remove the wrapping foil from the table. Do not use any sharp objects not to damage the upholstery.
- Cut safety bands, which disable height adjustment during transport, at table base (with hydraulically adjusted tables and tables with optional accessory KS).
- Wrapping is made of environment friendly material that can be recycled. Make sure all wrappings go to the right disposal.

Before the first use

- Ensure the stability of the table by screwing or unscrewing the four white plastic legs. Then fasten the nuts with an open-end wrench no. 17.

2. SHORT OVERVIEW

therapy table S

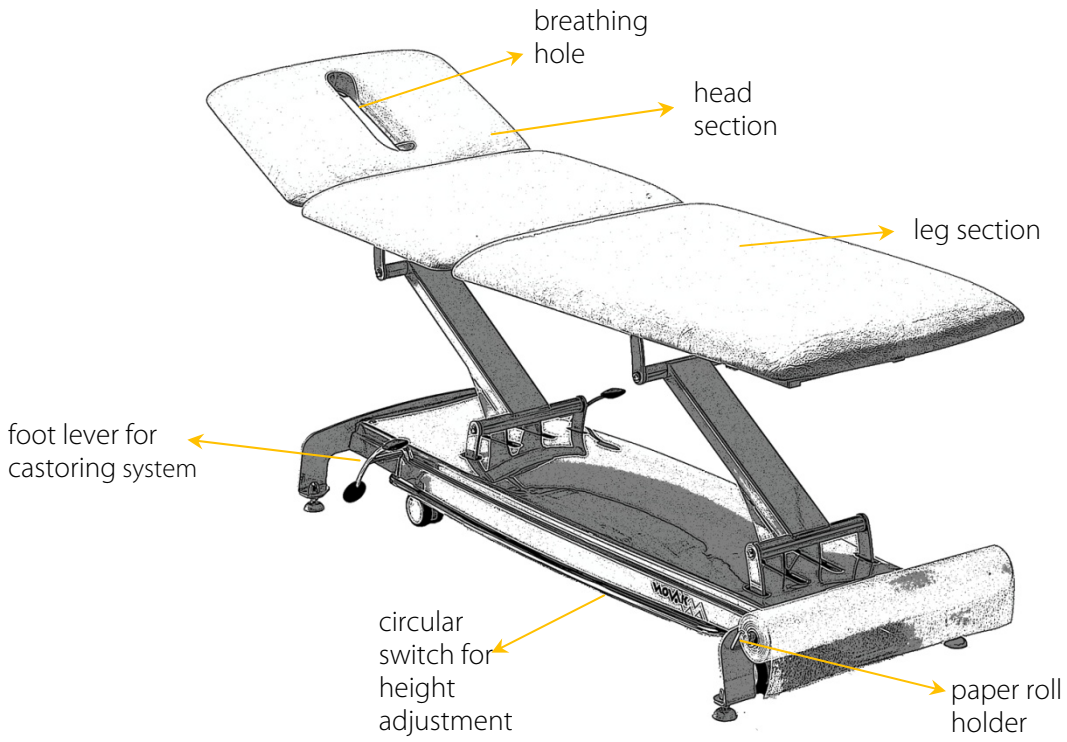

therapy table S3

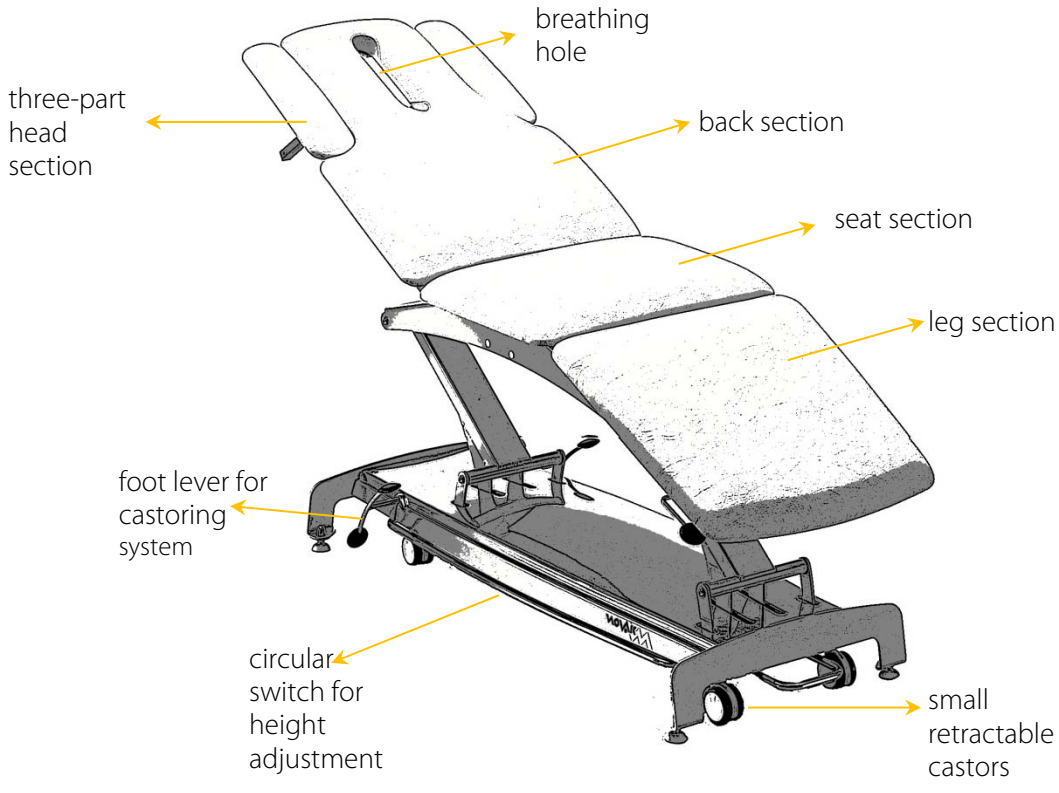

therapy table S4

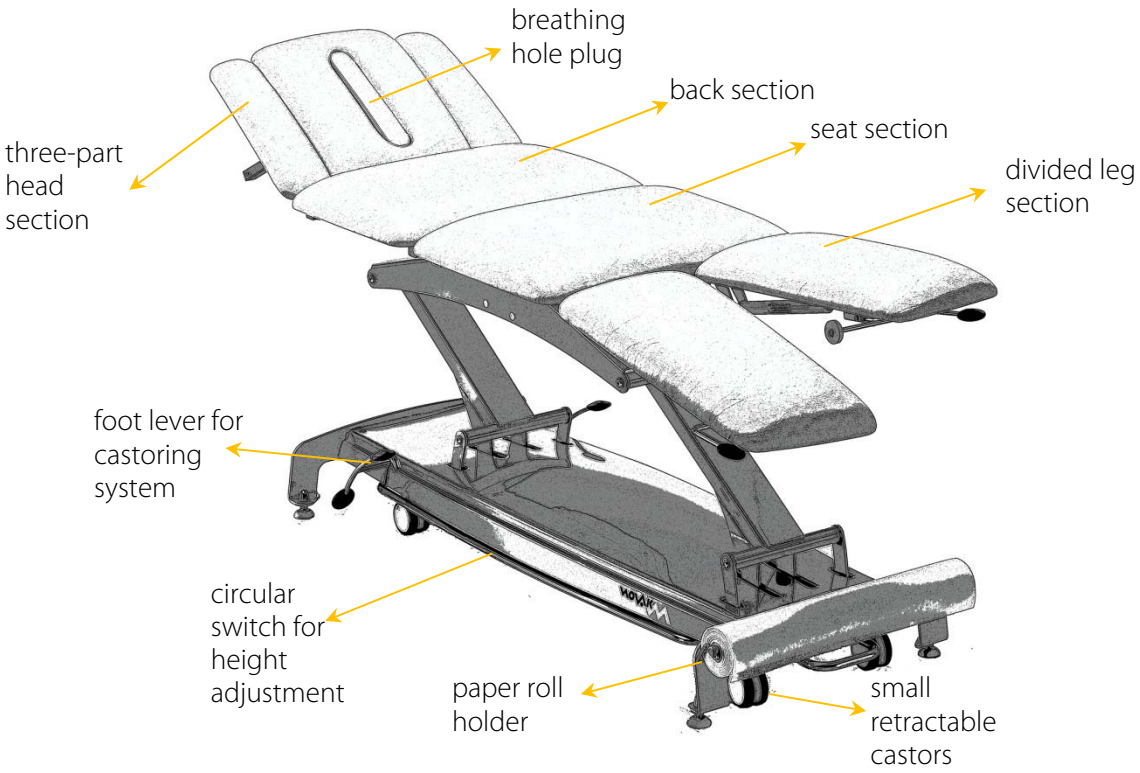

3. TECHNICAL DESCRIPTION

	TMS	TMS3	TMS4
table length	2050 mm	2050 mm	2050 mm
table width	65 or 75 cm	65 or 75 cm	65 or 75 cm
table height	from 44 to 92 cm	from 44 to 92 cm	from 44 to 92 cm
head section length	460 mm	930 mm	460 mm
back section length	550 mm	---	470 mm
seat section length	---	500 mm	500 mm
leg section length	1040 mm	620 mm	620 mm
table weight(depends on equipment)	+/- 75 kg	+/- 75 kg	+/- 75 kg
head section adjustment	lockable gas spring	---	lockable gas spring
back section adjustment	fixed	linear motor	linear motor
seat section adjustment	---	linear motor	linear motor
leg section adjustment	linear motor	lockable gas spring	lockable gas spring
height adjustment	linear motor	linear motor	linear motor
motor characteristics:	Voltage: 220-230V~, 50Hz current: max 1.5A working cycles: 10% (max. 6min/h of constant work) Power: 200W	Voltage: 220-230V~, 50Hz current: max 1.5A working cycles: 10% (max. 6min/h of constant work) Power: 200W	Voltage: 220-230V~, 50Hz current: max 1.5A working cycles: 10% (max. 6min/h of constant work) Power: 200W
upholstery material	Imitation leather (color chart I., II., III. in IV.)	Imitation leather (color chart I., II., III. in IV.)	Imitation leather (color chart I., II., III. in IV.)
weight capacity	180 kg	180 kg	180 kg
in series	MK1 – small, retractable castors KS – circular switch RS – handset OO1, OO2 – oval or oblong breathing hole	MK1 – small, retractable castors KS – circular switch RS – handset OO1, OO2 – oval or oblong breathing hole	MK1 – small, retractable castors KS – circular switch RS – handset OO1, OO2 – oval or oblong breathing hole
optional accessories:			
breathing hole plug	COO1, COO2	COO1, COO2	COO1, COO2
three-part head section	TVL	TVL	TVL
divided leg section	---	DND	DND
fixation rail	LE3	LE4	LE5
armrest	---	NZR	NZR
side table	---	MOL	MOL
infusion pole	---	SIF2	SIF2
safety rails	OOL4	---	---
paper roll holder	NZP6	NZP6	NZP6
foot switch	NS	NS	NS
antistatic castors	AC	AC	AC
thick stitched padding (6cm)	---	---	STU
folding side armrests	---	---	KR
increased weight capacity (240 kg)	ME1	ME1	ME1

--- not available

4. USER MANUAL

therapy table S, therapy table S3, therapy table S4

- **Electric height adjustment:**

Adjust height by turning the circular switch into direction as shown on the picture or by a hand switch.

Do not step on circular switch!

- **Small retractable castors (MK1)**

Press foot lever as shown on the picture to bottom position. Castors are up and the table stands firmly on four plastic legs. Moving the lever into the opposite direction, the castors come down and the table is ready to be moved.
Caution: Do not press the foot lever with patient on the table!

- **Foot section adjustment**
(only for TMS3 and TMS4)

Press the lever, move the foot section into desired position and release the lever.

- **Head section adjustment**

Press the lever, move the head section into desired position and release the lever.

- **Handset (RS)**

To lift or lower the table and move its sections, press the appropriate button as shown on the hand control. When a desired position is reached, let go off the button.

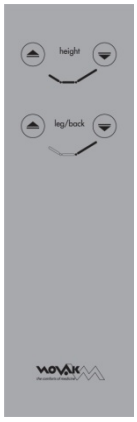

Handset for TMS:
To adjust height and foot section

Handset for TMS3 and TMS4:
To adjust height, back and middle sections

Memory function:
Set the table into desired position, press the store button and save the position by pressing the memory button 1. or 2. Two table positions can be saved and easily gained again simply by pressing the memory button.

5. OPTIONAL ACCESSORIES

- **Foot switch (NS)**

To lift or lower the table, press the appropriate button as shown on the switch. When desired height is reached, release the button

- **Three part head section (TVL)**

To adjust armrest, un-tighten the screw, move the armrest into desired position (up or down) and fasten back the screw.

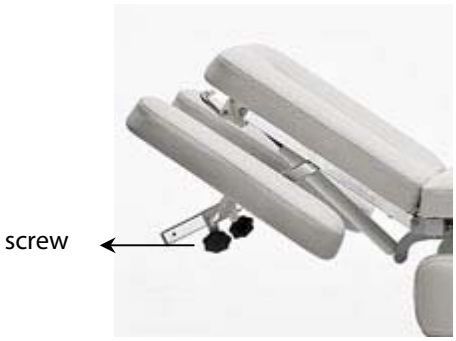

- **Two part foot section (DND)**

Press the lever, set the foot section into desired position and release the lever.

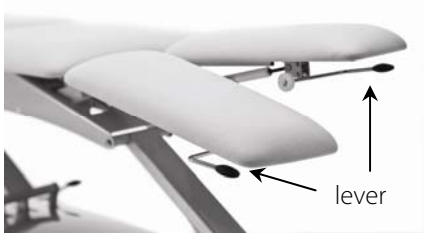

- **Paper roll holder (NZP6)**

Remove the stick from the holder, put on a roll of paper and put the stick back.

- **Antistatic castors (AC)**

Set as small castors. (MK1)

- **Fixation rail (LE3, LE4, LE5)**

Fixation rail is intended for attachment of optional accessories.

- **Side table (MOL)**

Side table is attached onto the fixation rail. Its position is adjusted by a screw.

- **Armrest (NZR)**

Armrest is attached onto the fixation rail. To change its position, un-tighten the screw under the table top, set the armrest and fasten the screw.

- **Infusion pole (SIF2)**

Infusion pole is attached onto the fixation rail. Height is adjusted by a screw.

- **Safety rails (OOL4)**

To place the rail into upright position, simply lift it. In the upper position safety pin gets stuck and prevents the rail from folding. To fold the rail, hold it and remove the pin then push the rail down.

- **Folding side armrests**

To fold the armrest, push it lightly forward (1.) and down (2.). When armrest is lifted, it sticks in the upper position. Maximum weight capacity is 15 kg.

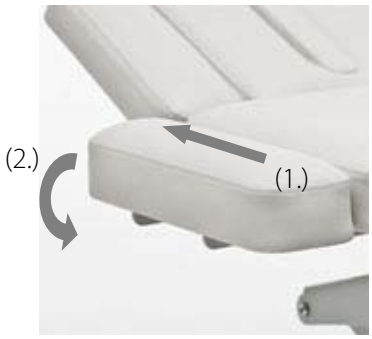

6. DECLARATION OF CONFORMITY

Manufacturer:	**Novak M d.o.o.**
Address	**Brezovce 7, 1236 Trzin, SLOVENIJA**
Product:	**Therapy table S, Therapy table S3, Therapy table S4**
Model:	**TMS-65 or 75 // TMS3-65 or 75 // TMS4-65 or 75**
Classification (MDD, annex IX):	**class I**

Hereby we declare that the stated products are in accordance with EC directives. All according documents are archived at manufacturer.

MEDICAL DEVICE DIRECTIVE: MDD 93/42/EGS

Trzin, 20.6.2008
Name: Novak Miha
Function: direktor
Signature:

7. GUARANTEE CERTIFICATE

product: **Therapy table S, Therapy table S3, Therapy table S4**

model: **TMS-65 or 75 // TMS3-65 or 75 // TMS4-65 or 75**

customer:

address:

producer's signature and stamp:

distributor's signature and stamp:

service: **Novak M d.o.o.**

Guarantee conditions:
Novak M d.o.o. offers a 48 months guarantee for its products commencing on the day of purchase. Guarantee for upholstery material is 12 months.
Should guarantee repairs be necessary the customer must inform the producer or an authorized dealer. The guarantee must be verified by purchase invoice.

The guarantee obligates Novak M d.o.o. to carry the costs of repair of all parts or components which might fail during normal use inside the guarantee period.

Guarantee does not cover defects or poor performance:
- If a customer does not follow the requirements and recommendations set out in the user manual.
- Caused by unauthorized modification or attempted repair.
- Caused by customer's misuse or neglect.
- If some not genuine parts are build into the product.
- Caused during transport after the product is handed to the customer.

Guarantee repairs should be done in 45 days, otherwise the product is replaced.
Repair and spare parts are available for 5 years from the date of purchase